

 
 
Hose Removal & Replacement

For Vitamix® Rinse-O-Matic® Blender Container Rinsers



HOSE ASSEMBLY REMOVAL


1. Turn the water supply off.
2. Disconnect the Rinse-O-Matic Blender Container Rinsers from the water supply.
3. Disconnect the unit from the sink and turn it over so the hose connection can be seen.
4. Insert the Push-to-Connect Tool (Item #PLS415) between the elbow collar and the hose. Move the tool from side-to-side to loosen the hose from the collar.
5. Use two fingers to hold the elbow collar back while pulling on the hose to disengage it and remove the hose through the housing collar.

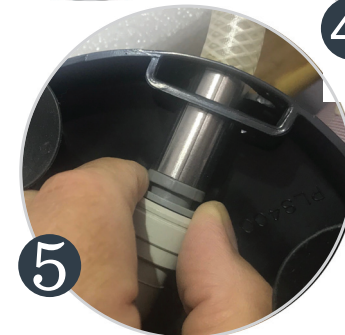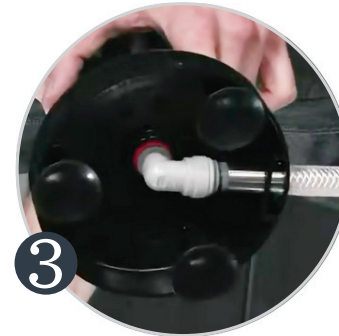

(Replacement instructions on back)

HOSE ASSEMBLY REPLACEMENT

1. Place the Rinse-O-Matic Blender Container Rinser on its side so the hose connection location can be seen.
2. Insert the new hose through the housing opening.
3. Push the end of the hose completely into the elbow (approximately 1" [2.5 cm]). Pull slightly on the hose to ensure the elbow has gripped the hose properly.
4. Reattach the Rinse-O-Matic Blender Container Rinser to the sink.
5. Reconnect the unit to the water supply and turn the water supply on.

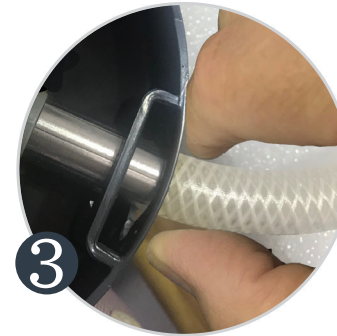

Questions?

Call Vitamix Commercial Customer Service at **800.886.5235**.
International customers, please call **+1.440.782.2450**.